

Birdsong Identiflyer

This unique clock doesn't just tell time and allow you to set alarms. The Birdsong Identiflyer wakes you up with the calming sound of birdsong, allows you to play birdsong manually, and even lets you replace birdsong cards to give you a variety of sounds!

The Interface



Setting the Time

1. Press and hold down the “clock” button (located on the right side).
2. While still holding the “clock” button down, press the “hour” button once for each hour you want to increase the time.
3. While still holding the “clock” button down, press the “minute” button once for each minute you want to increase the time.
4. Release the “clock” button. The screen will now show the time you have chosen.

Setting the Alarm

1. Slide the bar (located below the screen) to the end labeled “alarm.”
2. Press and hold down the “alarm” button (located on the right side). When you press this button, the screen will automatically switch to the current alarm time.
3. While still holding the “alarm” button down, press the “hour” button once for each hour you want to increase the alarm time.
4. While still holding the “alarm” button down, press the “minute” button once for each minute you want to increase the alarm time.

Using the Snooze Function

- When the alarm goes off, you can press the “snooze” button (located above the screen) to delay the alarm five minutes.

Adjusting the Volume

- Scroll the volume dial (located on the left side) up to increase the volume for both the alarm and the birdsong. Scroll down to decrease it.

Making the Screen Glow

- To light the screen, press the “glow” button (located above the screen).

Manually Playing Birdsong

1. Make sure a card is in the slot.
2. Slide the bar (located below the screen) to the end labeled “manual.”
3. Press the “play” button to play the any birdsong. It will automatically play the first birdsong on the card.
4. Press the “select” button to select the next birdsong listed on the card. A red light will shine next to the selected birdsong. You will have to press the “select” button once for each time you want the selection light to move down.

Note: A birdsong must finish playing before you can play another. If you move on and press play too quickly, the clock will continue to play the first birdsong.

Replacing Birdsong Cards

1. Remove the current card from the slot by gripping the top and simply pulling up.
2. Ensure that the new card is right-side-up with the bird side facing you.
3. Slide the card into the slot, pressing it firmly down to the bottom.

Playing Birdsong Hourly

- To make birdsong play hourly, slide the bar (located below the screen) to the center labeled “hourly.”